
• W A R N I N G •

This manual contains information on limitations regarding product use and fun
on the limitations as to liability of the manufacturer. The entire manual should

Instruction Manual

DSC[®] Classic PC1555



© 1997 Digital Security Controls Ltd.
1645 Flint Road, Downsview, Ontario, Canada M3J 2J6
Printed in Canada 29002443 R1

Read Carefully

As the only individual in contact with each item in this warning system.

signed to be as effective as possible. There may be other types of emergency alarm system of any type or may fail to operate as expected for a number of reasons:

- **Location:** The alarm system may not be installed in a location that is easily accessible to all occupants.
- **Obstructions:** The alarm system may be obstructed by furniture, curtains, or other items.
- **Power:** The alarm system may not be properly connected to the power source.
- **Batteries:** The alarm system may not be properly maintained.
- **Components:** The alarm system may not be properly installed or maintained.
- **Interference:** The alarm system may be interfered with by other electronic devices.
- **Human Factors:** The alarm system may not be properly used or maintained.

unprotected access point, circumvent a system by moving through an area of insufficient protection, or interfere with or prevent the system.

• smoke detectors and many other security devices may not be properly maintained or installed. If a device is found to be defective, it should be replaced immediately. Even if the device is replaced, the system should be checked to ensure it is in good condition and is operating properly. If a device is found to be defective, it should be replaced immediately. Even if the device is replaced, the system should be checked to ensure it is in good condition and is operating properly.

Batteries

As has been designed to provide several years of service. The expected battery life is a function of the type of battery, the ambient temperature, and the rate of discharge. The battery should be replaced when the voltage drops below the minimum operating voltage. Regular testing and maintenance are required to ensure the battery is in good operating condition.

Frequency (Wireless)

Interference may occur under all circumstances which could affect the operation of the alarm system. This interference may be caused by other wireless devices operating in the same frequency band.

alarm or emergency switch possibly due to a malfunction. It is important that all components of the alarm system and that the system indicates an alarm.

Smoke Detectors

Smoke detectors that are a part of this system may not properly alert occupants of a fire for a number of reasons, some of which follow. The smoke detectors may have been improperly installed or positioned. Smoke may not be able to reach the smoke detectors, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors. Smoke detectors may not detect smoke from fires on another level of the residence or building.

Every fire is different in the amount of smoke produced and the rate of burning. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Even if the smoke detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

Motion Detectors

Motion detectors can only detect motion within the designated areas as shown in their respective installation instructions. They cannot discriminate between intruders and intended occupants. Motion detectors do not provide volumetric area protection. They have multiple beams of detection and motion can only be detected in unobstructed areas covered by these beams. They cannot detect motion which occurs behind walls, ceilings, floor, closed doors, glass partitions, glass doors or windows. Any type of tampering whether intentional or unintentional such as masking, painting, or spraying of any material on the lenses, mirrors, windows or any other part of the detection system will impair its proper operation.

Passive infrared motion detectors operate by sensing changes in temperature. However their effectiveness can be reduced when the ambient temperature rises near or above body temperature or if there are intentional or unintentional sources of heat in or near the detection area. Some of these heat sources could be heaters, radiators, stoves, barbecues, fireplaces, sunlight, steam vents, lightning and so on.

Warning Devices

Warning devices such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If warning devices are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible warning devices may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners or other appliances, or passing traffic. Audible warning devices, however loud, may not be heard by a hearing-impaired person.

Telephone Lines

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also an intruder may cut the telephone line or defeat its operation by more sophisticated means which may be difficult to detect.

Insufficient Time

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time to protect the occupants or their belongings.

Component Failure

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

Inadequate Testing

Most problems that would prevent an alarm system from operating as intended can be found by regular testing and maintenance. The complete system should be tested weekly and immediately after a break-in, an attempted break-in, a fire, a storm, an earthquake, an accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

Security and Insurance

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. Industry Canada does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

User should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Number of all the devices does not exceed 5. The REN of this unit is 0.1

AVIS: L'étiquette de l'industrie Canada identifie le matériel certifié. Cette certification signifie que le matériel est conforme aux exigences de protection, de fonctionnement et de sécurité des réseaux de télécommunications. L'industrie Canada ne garantit pas que le matériel fonctionnera satisfaitement.

Avant d'installer ce matériel, l'utilisateur doit s'assurer que son installation est permise dans les installations de la compagnie locale des télécommunications. L'équipement doit également être installé en suivant une méthode acceptable de connexion. Le client doit être conscient que le respect des conditions ci-dessus n'empêche pas la dégradation de service dans certaines situations.

Les réparations de matériel homologué doivent être effectuées par une entreprise canadienne autorisée désignée par le fournisseur. Toute réparation ou modification effectuée par l'utilisateur peut donner lieu à la demande de la compagnie des télécommunications de déconnecter l'équipement.

Pour sa propre protection, l'utilisateur doit s'assurer que les connexions électriques de son système d'alimentation, des lignes téléphoniques et des conduites métalliques d'eau intérieure, si elles sont présentes, sont effectuées ensemble. Cette précaution est particulièrement importante en zones rurales.

ATTENTION: Les utilisateurs ne doivent pas tenter de faire de telles connexions eux-mêmes, mais doivent contacter l'autorité appropriée, ou un électricien, en fonction du cas.

AVIS: L'indice d'équivalence de la sonnerie (IES) attribué à chaque terminal indique le nombre maximal de terminaux autorisés à être connectés à une interface. La terminaison d'une interface peut consister de toute combinaison de quelques dispositifs, à la condition que la somme de tous les indices d'équivalence de la sonnerie de tous les dispositifs ne dépasse pas 5. L'indice d'équivalence de la sonnerie (IES) de cet appareil est de 0,1.

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/television technician for help.
- The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

IMPORTANT INFORMATION

This equipment complies with Part 68 of the FCC Rules. On the side of the FCC registration number of this equipment.

NOTIFICATION TO TELEPHONE COMPANY: The customer shall notify the telephone company of the particular line to which the connection will be made, and provide the FCC registration number and the ringer equivalence of the protective circuit.

FCC Registration Number: F53CAN-32028-AL-E
Facility Interface Code: 02LS2
Ringer Equivalence Number: 0.1B
Service Order Code: 9-0F
USOC Jack: RJ31X

TELEPHONE CONNECTION REQUIREMENTS: Except for the telephone company provided ringers, all connections to the telephone network shall

be made through standard plugs and telephones, in such a manner as to allow it to be connected to the telephone network. Standard jacks connected thereto is withdrawn, no equipment at the customer's premises may be connected to the telephone network without the approval of the telephone company. **INCIDENCE OF HARM:** Should terminal cause harm to the telephone network, the telephone company shall promptly inform the customer of the circumstances. In the case of an emergency, the telephone company shall promptly inform the customer of the circumstances. **ADDITIONAL TELEPHONE COMPANY INFORMATION:** The telephone company shall promptly inform the customer of the circumstances. **ADDITIONAL TELEPHONE COMPANY INFORMATION:** The telephone company shall promptly inform the customer of the circumstances.

The FCC prohibits customer-provided terminal equipment from being used in conjunction with this equipment.

CHANGES IN TELEPHONE COMPANY POLICY: The telephone company may make changes to its equipment, operations or procedures, which may require the user to take appropriate action. The telephone company shall promptly inform the customer of the circumstances. **RINGER EQUIVALENCE NUMBER (REN):** The ringer equivalence number of this equipment shall be given adequate facilities to maintain uninterrupted service.

QUANTITY OF DEVICES: The quantity of devices that you may connect to the telephone network shall not exceed five (5). To be certain of all devices connected to your line, you may want to contact your telephone company. **EQUIPMENT MAINTENANCE FACILITY:** The telephone company shall promptly inform the customer of the circumstances. **TELEPHONE COMPANY:** The telephone company shall promptly inform the customer of the circumstances.

Digital Security Controls Ltd. 160 Washburn

About Your Security System

Your DSC security equipment has been designed to provide you with the greatest possible flexibility and convenience. Read this manual carefully and have your installer instruct you on your system's operation and on which features have been implemented in your system. All users of this system should be equally instructed in its use. Fill out the "System Information" page with all of you zone information and access codes and store this manual in a safe place for future reference.

Fire Detection

This equipment is capable of monitoring fire detection devices such as smoke detectors and providing a warning if a fire condition is detected. Good fire detection depends on having adequate number of detectors placed in appropriate locations. This equipment should be installed in accordance with N.F.P.A. standard #72. (N.F.P.A., Batterymarch Park, Quincy MA 02269). Carefully review the Family Escape Planning guidelines in this manual.

NOTE: Your installer must enable the fire detection portion of this equipment before it becomes functional.

Testing

To insure that your system continues to function as intended, you must test your system weekly. Please refer to "Testing Your System" on page 13 of this manual. If your system does not function properly, call your installing company for service.

Monitoring

This system is capable of transmitting alarms, troubles and emergency information over telephone lines to a monitoring station. If you inadvertently initiate an alarm, immediately call the monitoring station to prevent an unnecessary response.

NOTE: The monitoring function must be enabled by the installer before it becomes functional.

General System Operation

Your security system is made up of a DSC control panel, one or more keypads and various sensors and detectors. The control panel will be mounted out of the way in a utility closet or in a basement. The metal cabinet contains the system electronics, fuses and stand-by battery. There is normally no reason for anyone but the installer or service professional to have access to the control panel.

All the keypads have an audible indicator and command entry keys. The LED keypads have a group of zone and system status lights. The LCD keypad has an alphanumeric liquid crystal display (LCD).

The keypad is used to send commands to the system and to display the current system status. The keypad(s) will be mounted in a convenient location inside the protected premises close to the entry/exit door(s).

The security system has several zones of area protection and each of these zones will be connected to one or more sensors (motion detectors, glassbreak detectors, door contacts, etc.). A sensor in alarm will be indicated by the corresponding zone lights flashing on a LED keypad or by written messages on the LCD keypad.

IMPORTANT NOTICE

A security system cannot prevent emergencies. It is only intended to alert you and – if included – your monitoring station of an emergency situation. Security systems are generally very reliable but they may not work under all conditions and they are not a substitute for prudent security practices or life and property insurance. Your security system should be installed and serviced by qualified security professionals who should instruct you on the level of protection that has been provided and on system operations.

System Information

Fill out the following information for future reference and store this manual in a safe place.

Access Codes

Your Master Code is: _____

Additional Access Codes:

01 _____	09 _____	17 _____	25 _____
02 _____	10 _____	18 _____	26 _____
03 _____	11 _____	19 _____	27 _____
04 _____	12 _____	20 _____	28 _____
05 _____	13 _____	21 _____	29 _____
06 _____	14 _____	22 _____	30 _____
07 _____	15 _____	23 _____	31 _____
08 _____	16 _____	24 _____	32 _____

Zone Information

Zone	Protected Area	Zone Type
1	_____	_____
2	_____	_____
3	_____	_____
4	_____	_____
5	_____	_____
6	_____	_____
7	_____	_____
8	_____	_____

Keypad Zone [F] FIRE _____

Keypad Zone [A] AUXILIARY _____

Keypad Zone [P] PANIC _____

The Exit Delay Time is _____ seconds.

The Entry Delay Time is _____ seconds.

For Service

Monitoring Station Information:

Account #: _____ Telephone #: _____

Installer Information:

Company: _____ Telephone #: _____

Access Codes

Access Codes are used to arm and disarm the system. There are 33 access codes available: one Master Code and 32 access codes.

Only the Master Code can be used to program additional security codes and to change other system features as well as to arm and disarm the security system. The Master Code will be supplied to you by your installer. All keypad entries are made by pressing one key at a time.

All access codes can be programmed by following the procedure outlined in "Programming Security Codes" on page 6.

Arming the System

Arming from an LED Keypad:

If the Ready light is ON, the system is ready for arming. If the Ready light is OFF, check to see that all doors and windows are closed and that motion is stopped in areas covered by motion detectors. The system cannot be armed unless the Ready light is ON indicating that all zones are closed and the system is in the Ready state.

Enter your access code. As each digit is entered, the keypad sounder will beep. If the access code was entered incorrectly, the keypad buzzer will sound steadily for one second. If this occurs, press the [#] key and re-enter your access code. If the correct access code is entered, the keypad sounder will beep quickly and the Armed light will come ON. Exit the premises through the door indicated by your installer as the Exit/Entry door.

The panel will provide an exit delay period, indicated by keypad beeps, for you to exit the premises without causing an alarm. At the end of the exit delay period, all keypad lights, except the Armed light, will turn OFF and the system will be armed. The exit delay time can be changed by your installer.

Arming from an LCD Keypad:

Secure System Before Arming <>	When this message appears, one or more zones are not secured. To secure the system, close all doors and windows and cease all motion in areas covered by motion detectors.
-----------------------------------	--

Enter Code to Arm System <>	When this message appears, use the arrow (< >) keys to verify that the system is clear of troubles and that no zones are bypassed unintentionally (see "Viewing Trouble Conditions" on page 11 and "Zone Bypassing" on page 10).
--------------------------------	--

Enter Code to Arm System	If this display is showing, the system is in the Ready state and may be fully armed. To arm the system, enter your access code.
-----------------------------	---

Exit Delay in Progress	Once the correct access code has been entered, the display will be as shown. The panel will provide an exit delay period, also indicated by keypad beeps, for you to exit the premises without causing an alarm. Exit through the door indicated by your installer as the Exit/Entry door.
---------------------------	--

Enter Code to Disarm System	This message will be displayed once the exit delay expires and the system is fully armed.
--------------------------------	---

* WARNING * Bypass Active	If this message appears, be aware of which zones are bypassed and why (see "Zone Bypassing" on page 10). NOTE: If you arm the system with a zone bypassed or with a trouble present, your security protection is reduced.
------------------------------	--

Alternate Arming Methods

Away Arming

Arming the system in the Away mode will have all interior zones and perimeter zones active. If motion is detected in the interior zones, or if one of the perimeter zones is violated, the alarm sequence will begin. To arm in the Away mode, enter your access code and exit the premises through a designated Exit/Entry door. The system will recognise that occupants have left the premises. Once the exit delay expires, the system will be fully armed.

Audible Exit Fault

In an attempt to reduce false alarms, the Audible Exit Fault is designed to notify you of an improper exit when arming the system in the Away mode. In the event that you fail to exit the premises during the allotted exit delay period, or if you do not securely close the Exit/Entry door, the system will notify you that it was improperly armed in two ways: the keypad will emit one continuous beep and the bell or siren will sound. If this occurs, you must re-enter the premises, enter your access code to disarm the system, and then follow the arming procedure again, making sure to exit the premises in the proper fashion.

Stay Arming

This feature, if enabled by your installer, will allow you to arm the perimeter zones while leaving the interior zones inactive so that you can remain on the premises while the system is armed. When you enter your security code to arm the system and *do not* exit the premises through a designated Exit/Entry door, the system will arm in the Stay mode, automatically bypassing the interior zones.

The interior zones can be reactivated at any time by entering [*][1] at any keypad. If you reactivate the interior zones, be sure to only inhabit areas not covered by motion detectors. To access areas protected by motion sensors, you must enter your security code and disarm the system.

Arming Without Entry Delay

If you wish to arm your system without the entry delay, enter [*][9] then your access code. The Armed light will flash as a reminder that the system is armed and has no entry delay. An entry through any zone programmed as a delay zone will create an instant alarm.

Quick Arm

When the Quick Arm feature is enabled, the system may be armed by simply pressing [*][0] instead of your access code. Please note that pressing [*][0] will only allow you to arm the system; to disarm, you must enter a valid access code. Your installer will inform you if the Quick Arm feature has been enabled on your system.

Quick Exit

When the Quick Exit feature is enabled, pressing [*][0] while the system is armed will provide a two minute window for you to exit the premises. **During this time, you may only open and close the designated Entry/Exit door once.** Once the door is closed, the panel will end the two minute quick exit delay. If the door is opened again, or if the door is not closed after two minutes, or if another zone is opened, the panel will begin the entry delay. Your installer will inform you if the Quick Exit feature has been enabled on your system.

Disarming the System

Disarming from an LED Keypad:

Enter the premises through a designated Exit/Entry door; entering by any other door will sound an immediate alarm. As soon as the Exit/Entry door is opened, the keypad will beep to indicate that the system should be disarmed. Go to the keypad and enter your access code. **If an error is made entering the code, re-enter your code correctly.** As soon as the correct code is entered, the Armed light will go out and the keypad will stop beeping.

The correct access code must be entered before the entry delay period expires. If a valid access code is not entered during this time, the system will go into alarm. The entry time delay may be changed by your installer.

If an alarm occurred while the system was armed, the Memory light (or System light on a PC1555RKZ keypad) and the zone light corresponding to the zone which caused the alarm will flash for 30 seconds. After the 30 second period, the Memory (or System) light and zone light will stop flashing and the panel will return to the Ready state. Pressing the [#] key during the 30 second period will cancel the alarm memory display. To view other alarms, press [*][3].

If a trouble was detected when the panel is disarmed, the Trouble light (or System light on a PC1555RKZ keypad) will turn ON (See "Viewing Trouble Conditions" on page 11 to determine the source of the trouble.) Please note that troubles will not display while the system is in the Alarm Memory Display mode.

Disarming from an LCD Keypad:

Upon entering through a designated Exit/Entry door, the keypad will beep and the entry delay will commence, reminding you to disarm the system. The keypad will display the following message...

Entry Active Enter Your Code	Enter your access code. If an error is made in entering the code, re-enter the code correctly. When a valid access code is entered, the keypad will stop beeping. If no alarms occurred while the panel was armed, and there are no troubles, the display will read...
---------------------------------	---

System Disarmed No Alarm Memory	After about five seconds, the system will return to the Ready state and the display will read...
------------------------------------	--

Enter Code to Arm System

View Memory <> "Zone of Alarm"	If an alarm occurred while the system was armed, this message will be displayed. Use the arrow (< >) keys to view which zones caused the alarm. If a zone is still in alarm, the display will show the following message to indicate that a zone is open...
-----------------------------------	---

Secure System Before Arming <>

Enter Code to Arm System <>	Upon disarming and if a trouble is present, this message will be displayed. Use the arrow (< >) keys to view which troubles are affecting the system (see "Viewing Trouble Conditions" on page 11).
--------------------------------	---

NOTE: If you return and find that an alarm has occurred while you were away, it is possible that an intruder may still be on the premises. Go to a neighbour's house, and call the local police to investigate.

The alarm memory is cleared each time the panel is armed so that any alarms showing are alarms that occurred only during the last armed period.

If An Alarm Sounds

Fire Alarm

If your system has been installed with fire detectors and the alarm sounds in a pulsing mode, follow your emergency evacuation plan immediately (see "Fire Escape Planning" on page 15).

Intrusion Alarm

If an intrusion alarm sounds, indicated by a continuous Bell or Siren, the alarm may be silenced by entering your access code. If the alarm was unintentional, call local authorities immediately to avoid an unnecessary response.

You can determine the source of the alarm by following the instructions in the "Disarming" section (see page 4 and 5). Once the source of the alarm has been corrected, the panel can be restored to its original Armed state.

NOTE: A fire alarm has priority over a burglary type alarm.

Function Keys

The PC5008Z and LCD5500Z keypads have five function keys – marked Stay, Away, Chime, Reset and Exit – which allow easy single-button activation of the most commonly used features. *If these keys have been enabled by your installer*, you can execute the programmed function by pressing and holding the corresponding key for two seconds. Corresponding function keys on the PC1555RKZ are number keys 1 to 5 respectively.

For more information regarding the operation of the function keys, talk to your alarm system installer.

Programming Security Codes

Programming codes from an LED Keypad:

The Master Code

To program the Master Code, enter [*][5][current Master Code][40][new Master Code]. The Master Code must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Press [#] to return to the Ready state.

Be sure to record your new Master Code on the "System Information" page in this booklet. **NOTE: We recommend that the factory default or obvious codes such as [1111] or [1234] not be used.**

Additional Codes

Up to 32 additional access codes (01 through 32) may be programmed.

To program a new code:

Enter [*][5][Master Code][code number 01 to 32][new access code]. The code number is a double digit from 01 to 32. Access codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Press [#] to return to the Ready state.

If an access code already exists for the code number you have selected, it will be replaced by the new code. Be sure to record your new code(s) on the "System Information" page in this book.

To erase a code:

Enter [*][5][Master Code][code number 01 to 32][*]. Press [#] to return to the Ready state. **The Master code cannot be erased.**

Programming codes from an LCD Keypad:

Master Code

Press the [*] key to enter the function list. Scroll (< >) to...

Press (*) for <>
Access Codes

Press [5] or [*]. The display will read...

Enter Master
Access Code

Enter your current Master Code. The display will read...

(*) to Edit <>
User Code 40P

"40P" represents the Master Code. Press the [*] key to indicate that you wish to program the Master Code. The display will read...

Enter New Code
1234 <>

Enter the new Master Code. The Master Code must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Once the new code is entered, the keypad will beep 3 times and the display will read...

(*) to Edit <>
User Code 40P

Press [#] to exit the code programming function.

Be sure to record your new Master Code on the "System Information" page in this booklet. **NOTE: We recommend that the factory default Master Code [1234] not be used.**

Additional Access Codes

To erase, add or change a user code, press [*] to enter the functions list. Use the arrow (< >) keys to scroll to the following message...

Press (*) for <>
Access Codes

Press [*]. Display will read...

Enter Master
Access Code

Enter the Master Code. Display will read...

[*] to Edit <>
User Code 01P

Use the scroll keys (< >) to find the access code – indicated by "02P" to "32P" – you wish to add, change or delete. Press the [*] key to select the code you wish to alter. The display will read...

Enter New Code
1234 <>


To add or change a code, enter the new code. Access codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. To delete an access code, enter [*]. Once the 4 digit code or [*] has been entered, the keypad sounder will beep 3 times and the display will read...

[*] to Edit <>
User Code 01P

The "P" means the code has been programmed. If there is no "P" then that code is deleted. Press [#] to exit the code programming function. **The Master code cannot be erased.**

Remember to record your new code(s) on the "System Information" page in this booklet.

PC1555RKZ LED Keypad

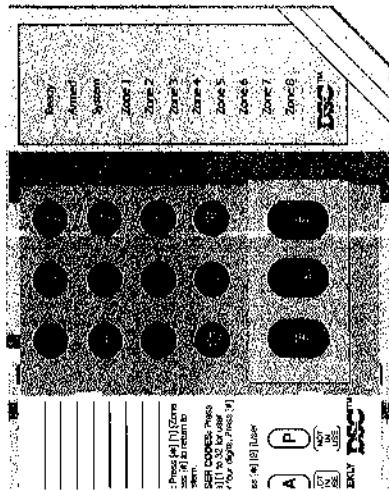

555RKZonly):

ON, one or
ns could be
T.

3: "Viewing
in page 11).

Disarming the


:"Zone
10).
/stern light will
rogramming
forming other
functions in this manual.

(All Keypads)

IZ:
for two seconds to send a FIRE transmission.
for two seconds to send an AUXILIARY transmission.
for two seconds to send a PANIC transmission.

r two seconds to send a FIRE transmission.
r two seconds to send an AUXILIARY transmission.
r two seconds to send a PANIC transmission.
E (All Keypads): The Fire, Auxiliary and Panic keys
less programmed by the installer. If these keys
e installer has enabled audible feedback, holding
e seconds will cause the keypad sounder to beep
nput has been accepted and transmission is

PC5508Z LED Keypad

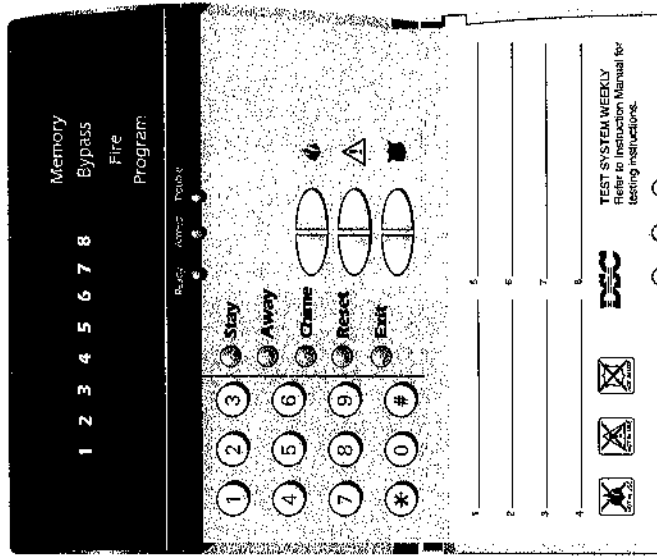

Memory Light

Upon disarming, if an alarm has occurred while the system was armed, the Memory light will turn ON (See "Disarming the System" on page 5).

Bypass Light

If the Bypass light is ON, one or more zones are bypassed (See "Zone Bypassing" on page 10).

Fire Light

If the Fire light is ON, a fire alarm has occurred (See "Fire Alarm Operation" on page 13).

Program Light

The Program light will flash when you are programming access codes, or performing other programming functions. If someone is programming at another keypad, the Program light will turn ON to indicate that the system is busy.

Display Lights (All Keypads)

Ready Light

If the Ready light is ON, the system is ready for arming. The system cannot be armed unless the Ready light is ON (see "Arming the System" on page 3).


Armed Light

If the Armed light is ON, the system has been armed successfully.

Trouble or System Light

If the Trouble light is ON, see "Viewing Trouble Conditions" on page 11.

LCD5500Z Keypad

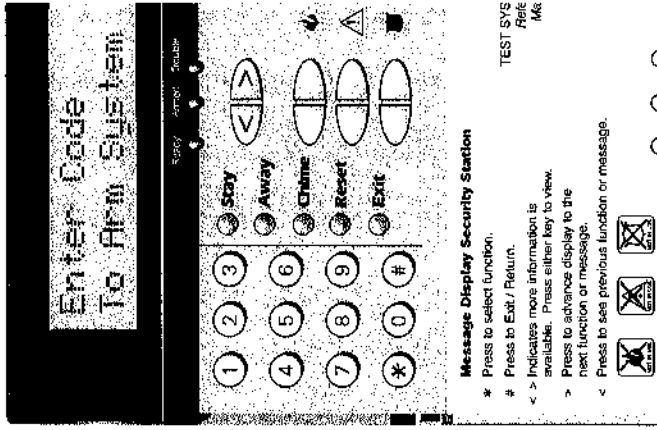

The Liquid Crystal Display (LCD) displays prompts: information on two 16 character lines.

If "<>" appears, more information can be accessed >) keys. Press [-] to see the previous function or item >]) to advance the display to next function or item of

Press the keys on the number pad as prompted by th alarms or troubles, to arm and disarm the system and To exit a function and return to the Ready state, press To select a function press [*].

Important Note: Test system have any system trouble corrected by your alarm ins

Zone Bypassing

The zone bypassing function is used when access is needed to part of the protected area while the system is armed. Zones which are temporarily out of service due to damaged wiring or contacts may be bypassed to allow system arming until repairs can be made.

Bypassed zones will not cause an alarm. Zones cannot be bypassed once the system is armed. Bypassed zones are automatically cancelled each time the system is disarmed and must be reapplied before the next arming.

NOTE: For security reasons, your installer may program the system to prevent you from bypassing certain zones.

Bypassing zones reduces your security protection. If you are bypassing a zone due to damaged wiring or contacts, please call a service technician immediately so that the problem can be resolved and your system returned to proper working order.

Make sure that no zones are unintentionally bypassed when arming your system.

To bypass zones from an LED keypad:

Start with the system in the Ready state. Enter [*][1][Zone(s) to be bypassed].

Enter the zone(s) as a two-digit number from 01 to 08. As each zone is bypassed, the corresponding zone light will turn ON. If a zone is bypassed by mistake, enter that zone number again; the zone light will turn OFF, indicating that the zone is not bypassed. Press [#] to return to the Ready state.

To bypass zones from an LCD keypad:

To bypass a zone, the system must be in the Ready state. The display will read...

Enter Code to
Arm System

Press the [*] key to enter the functions menu. The display will read...

Press (*) for <>
Zone Bypass

Press the [*] key to enter the zone bypassing mode. The display will read...

Zone Search <>
"Zone Name"

Use the arrow (< >) keys to find the zone to be bypassed and press the [*] key to select it. The display will read...

Zone Search <>
"Zone Name" B

"B" will appear on the display to show that the zone is bypassed. To unbyypass a zone, enter the zone number; the "B" will disappear from the display to show that the zone is no longer bypassed.

Zone Search <>
"Zone Name" 0

This display will be shown if a zone was open when you entered the bypassing command. The open zone will be represented by "O". If you bypass the open zone, the "O" will be replaced by a "B".

To exit the bypassing mode and return to the Ready state, press the [#] key.

Viewing Trouble Conditions

The control panel continuously monitors a number of possible trouble conditions. If one of these trouble conditions occur, the keypad will beep twice every 10 seconds until you press any key on the keypad.

NOTE: A TROUBLE condition reduces the security your system is designed to provide. Call your installing company for service.

To view troubles from an LED Keypad:

A trouble will be indicated by the Trouble light (or System light on a PC1555RKZ keypad) which will remain ON until the trouble condition is cleared. If you cannot determine the cause of the trouble condition, contact your installer for assistance.

To view the type of trouble condition, press [*][2]. One or more zone lights will turn ON, indicating the various trouble conditions:

ZONE LIGHT	TYPE OF TROUBLE
1	Service required. Call your installation company for service.
2	Indicates the loss of AC power. When this trouble occurs, the Trouble (or System) light will turn ON but keypad buzzer will not sound.
3	Telephone line trouble.
4	The panel has failed to communicate with the central station.
5	Zone fault. Press [5] and the zone light(s) corresponding to the faulted zones will turn ON.
6	Zone tamper. Press [6] and the zone light(s) corresponding to the tampered zones will turn ON.
7	Low zone battery. This trouble is generated when a wireless device exhibits a low battery condition. Press [7] one, two, or three times to view which devices are experiencing battery failure. The following will occur:
	Keypad beeps: Keypad displays:
Press [7]	1 Zones with low batteries (LED keypad - zone lights 1 to 8)
Press [7] again	2 Handheld keypads with low batteries (LED keypad - zone lights 1 to 4)
Press [7] again	3 Wireless keys with low batteries (LED keypad - zone lights 1 to 8). <i>To view the battery conditions of wireless keys 9 through 16, you must be at an LCD keypad.</i>
8	Loss of time on system clock. To set the system time, following the instructions in "Setting System Date and Time" on page 12.

To view troubles from an LCD Keypad:

From the Ready state, use the arrow (< >) keys to scroll to the following message.

```
System Trouble
(*2) to View <>
```

Press [*] [2] key to view the trouble. The message will read...

```
View Trouble <>
"Trouble Message"
```

Use the arrow (< >) keys to view which troubles are present on the system. Once you have scrolled through the list of troubles, press the [#] key to exit the Trouble Viewing mode and return to the Ready state.

Setting the System Date and Time

To set the system time, enter [*] [6] followed by the Master Code. Press [1]. The keypad will now accept 10 consecutive digits:

- Enter the Time in Hours and Minutes using the 24 Hour format (00:00 to 23:59).
- Enter the Date in Months, Days and Years (MM DD YY).

NOTE: If you have an LCD keypad, your installer may have programmed your system to display the time and date while the keypad is idle. **If this is the case, you may have to press the [#] key to clear the date and time before entering an access code to arm the system, or before performing any other keypad function.**

Testing Your System

Alarm Test

The Alarm Test provides two second test of the keypad sounder and bell or siren. Begin with the panel in the Ready state.

From an LED keypad, Enter [*][6][Master Code][4] then press [#] to return to the Ready state.

From an LCD keypad, press [*] to enter the functions list. Use the arrow (< >) keys to scroll to find "User Functions" and press [*] to select. Enter your Master Code and scroll to find the following message...

Select Option <>
System Test

Press [*] to perform an Alarm Test. The keypad will display the following message...

System Test
In Progress

Press [#] to return to the Ready state.

Full System Test

We recommend that you test your system weekly. Should the system fail to function properly, call your installation company immediately for service.

NOTE: Perform system tests during off-peak hours, such as early morning or late evening.

1. Inform the monitoring station that you are testing your system.
2. Begin with the system in the Ready state.
3. Perform a Bell/Battery test by pressing [*][6][Master Code][4]. The bell and keypad buzzer will sound for two seconds and all keypad lights will turn ON. Press [#] to exit.
4. Activate each sensor in turn (e.g. open a door/window or walk in motion detector areas).
From an LED keypad, observe the zone light turn ON when the zone is activated. The zone light will turn OFF when the system restores to normal (i.e. door or window closed).
From an LCD keypad, the following message will be displayed when each zone is activated...

Secure System
Before Arming <>

Use the arrow (< >) keys to view which zone is open. This message will disappear when the zone is restored.

5. If the panel has any fire zones, activation will cause the alarm signal to sound in a pulsed mode.

CAUTION: Do not use an open flame or burning materials to test a smoke or heat detector. Contact your installer for information on safe methods of testing detectors.

6. When testing is complete, call and advise the monitoring station. Should the system fail to function properly, contact your installer.

NOTE: Some features described above will not be functional unless enabled by your installer. Please ensure that your installer has advised you which features are functional on your system.

Door Chime Feature

The door chime feature is used to provide a tone from the keypad each time a door or window is opened or closed. The doors and windows which will provide this indication are programmed by your installer.

To activate the door chime from an LED Keypad:

Enter [*][4] to turn the door chime feature ON and OFF. When the command is entered, the keypad buzzer will beep 3 times if the door chime feature is enabled and will sound one long beep if it is disabled.

To activate the door chime from an LCD Keypad:

Press [*] to enter the function list, then scroll to find...

Press (*) For <> Door Chime	Press [*] or [4] to enable or disable the Door Chime feature. Press [#] to return to the Ready state.
--------------------------------	---

Fire Alarm Operation

Alarm

On a fire alarm, the bell or siren will pulse ON and OFF. The transmission of the alarm to the monitoring station is delayed for 30 seconds. If the alarm is not cleared within the 30 second delay, the it will be transmitted to the monitoring station.

Silence

To silence the bell or siren, press the [#] key. If the alarm is silenced and the smoke detector is not reset, the alarm will resound after 90 seconds.

Resetting Smoke Detectors

Once the smoke detector is reset, if it still detects smoke, the alarm sequence will resound as described above. If there is no smoke, the system will return to normal.

To reset smoke detectors from an LED Keypad:

Press [*][7][2].

To reset smoke detectors from an LCD Keypad:

Press [*] to enter the function list. Scroll to find:

Press (*) For <> Output Control	Press [*] to select the output control. The display will read...
------------------------------------	--

Select Output <> Utility Output	Use the arrow (< >) keys to find the following message and press the [*] key to select...
------------------------------------	---

Select Output <> Sensor Reset

NOTE: If you suspect that a fire alarm has transmitted and that there is no fire condition, call the monitoring station to avoid an unnecessary response. If a fire condition is apparent, follow your evacuation plan immediately. If the alarm sounds at night, evacuate immediately.

NOTE: The description above may not be applicable depending on how your installer has programmed the fire alarm operations on your system. Ask your installer for more information regarding your system's operation.

Household Fire Safety Audit

Most fires occur in the home. To minimize this danger, we recommend that a household fire safety audit be conducted and a fire escape plan be developed.

1. Are all electrical appliances and outlets in a safe condition? Check for frayed cords, overloaded lighting circuits, etc. If you are uncertain about the condition of your electrical appliances or household service, have a professional evaluate these units.
2. Are all flammable liquids stored safely in closed containers in a well ventilated cool area? Cleaning with flammable liquids should be avoided.
3. Are fire hazardous materials (matches) well out of reach of children?
4. Are furnaces and wood burning appliances properly installed, clean and in good working order? Have a professional evaluate these appliances.

Fire Escape Planning

There is often very little time between the detection of a fire and the time it becomes deadly. It is thus very important that a family escape plan be developed and rehearsed.

1. Every family member should participate in developing the escape plan.
2. Study the possible escape routes from each location within the house. Since many fires occur at night, special attention should be given to the escape routes from sleeping quarters.
3. Escape from a bedroom must be possible without opening the interior door.

Consider the following when making your escape plans:

- Make sure that all perimeter doors and windows are easily opened. Ensure that they are not painted shut, and that their locking mechanisms operate smoothly.
- If opening or using the exit is too difficult for children, the elderly or handicapped, plans for rescue should be developed. This includes making sure that those who are to perform the rescue can promptly hear the fire warning signal.
- If the exit is above the ground level, an approved fire ladder or rope should be provided as well as training in its use.
- Exits on the ground level should be kept clear. Be sure to remove snow from exterior patio doors in winter; outdoor furniture or equipment should not block exits.
- Each person should know of a predetermined assembly point where everyone can be accounted for i.e.: across the street or at a neighbour's house. Once everyone is out of the building, call the Fire Department.
- A good plan emphasizes quick escape. Do not investigate or attempt to fight the fire, and do not gather belongings or pets as this wastes valuable time. Once outside, do not re-enter the house. Wait for the fire department.
- Write the fire escape plan down and rehearse it frequently so that should an emergency arise, everyone will know what to do. Revise the plan as conditions change, such as the number of people in the home, or if there are changes to the building's construction.
- Make sure your fire warning system is operational by conducting weekly tests (see "Fire Alarm Operation" on page 13). If you are unsure about system operation, contact your installing dealer.
- We recommend that you contact your local fire department and request further information on fire safety and escape planning. If available, have your local fire prevention officer conduct an in-house fire safety inspection.

Maintenance

With normal use, the system requires minimum maintenance. The following points should be observed.

1. Do not wash the security station with a wet cloth. Light dusting with a slightly moistened cloth should remove normal accumulations of dust.
2. The battery/bell test is designed to determine battery condition. We recommended, however, that the stand-by batteries be replaced every three years.
3. For other system devices such as smoke detectors, passive infrared, ultrasonic or microwave motion detectors or glassbreak detectors, consult the respective manufacturer's literature for testing and maintenance.